 
 
 
 


 




 
 



 




T010A Synthetic linkage wooden door

Wooden door 2+0




Accessory List:

Accessory	Quantity	Accessory	Quantity
Linkage short guide roller 	1	Linkage long guide roller 	1
Damper with hanging part 	2	Top hanging plate 	1
Linkage down guider 	1	Transmission belt 3 meter 	1
Belt supporting plate 	1	Top hanging plate (with M4*6 Outer hexagon screw) 	1
Damper stopper component 	2	Top hanging roller 	2
Door stopper 	2	Wooden door hanging plate 	4
ST3.5*12 screw 	6	Wooden door down guiding roller 	1
4mm allen key 	1	M4*12 inner hexagon screw 	10
2mm allen key 	1	M4*6 inner hexagon screw 	2
ST4*30 self tapping wooden screw 	20		


Fixed door fittings need to be ordered separately

1. Door Dimension


Installation instruction (2+1)

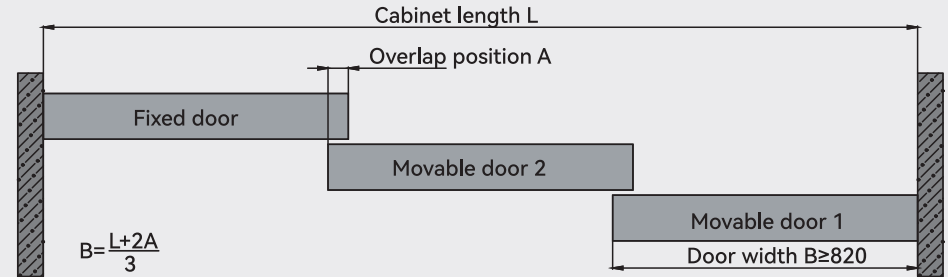


Single track diagram

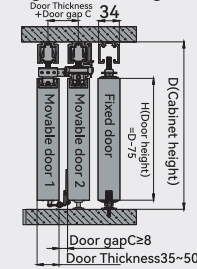


Hanging plate size and door slotting requirement

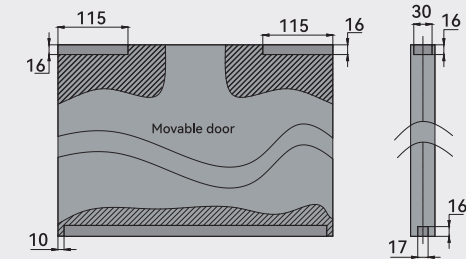


2. Rail accessory installation

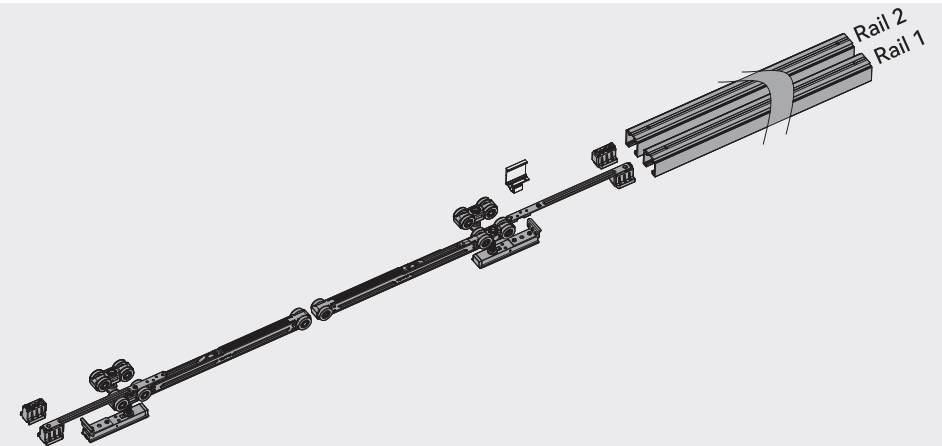


3. Rail and down guider accessory installation

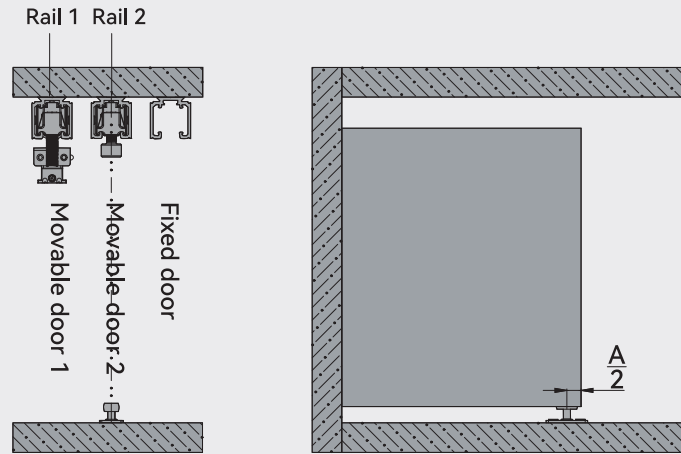


4. Door accessory installation

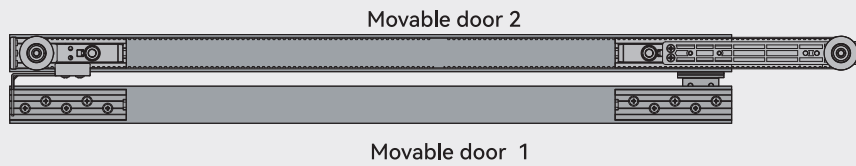


4.1 Movable doors hanging plate and down rail installation

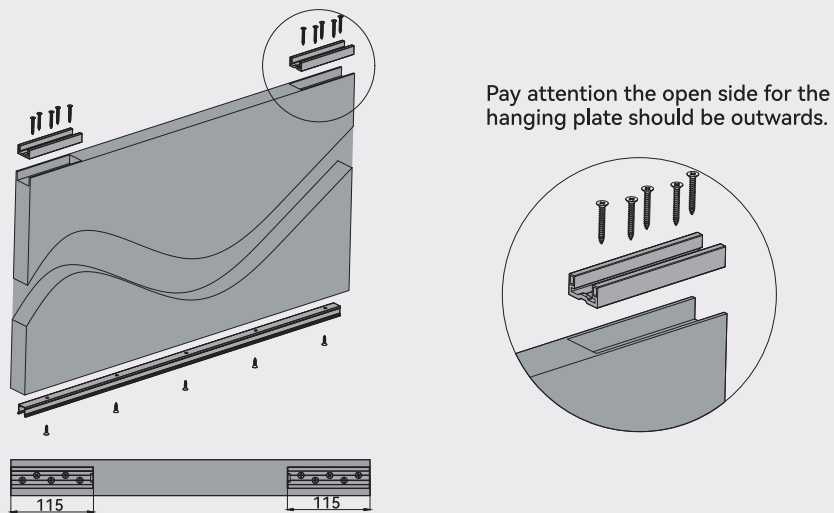

4.2 Movable door 2 linkage accessory installation

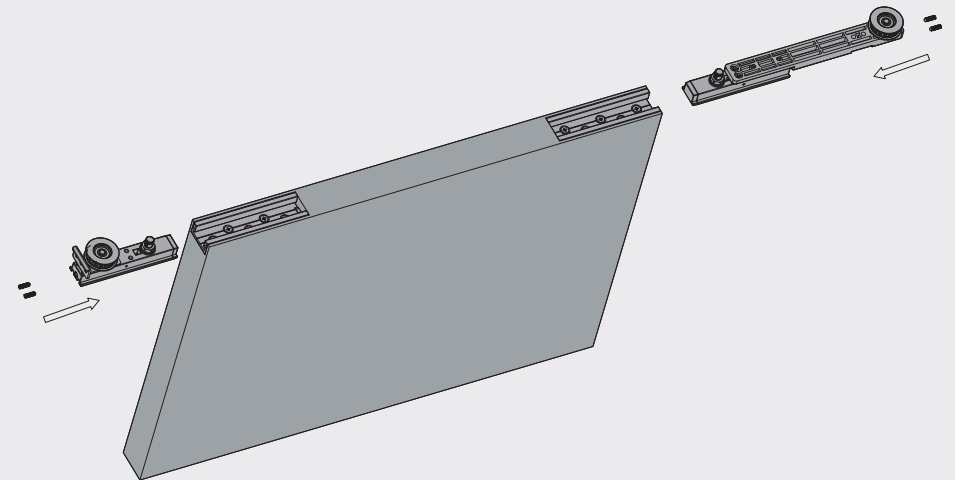


4.3 Install movable door 2 belt supporting plate and adjust the belt until it is tight and not able to fall off

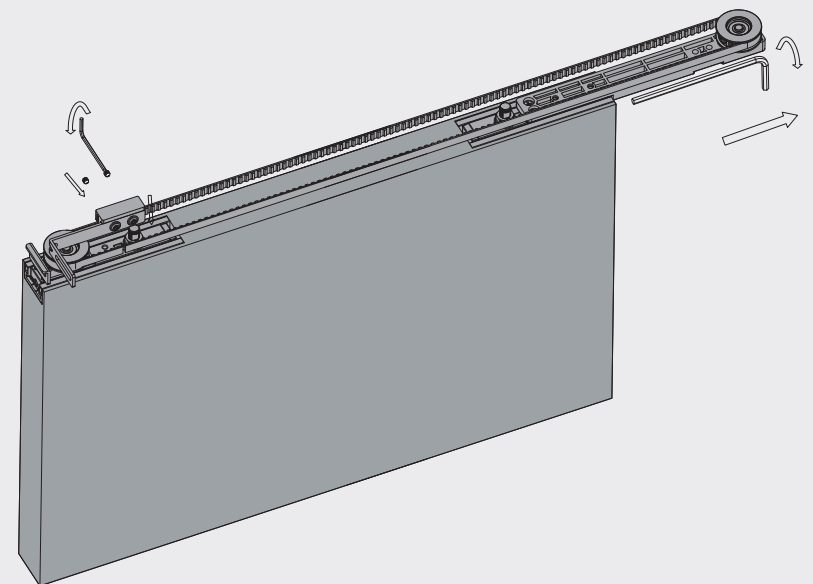


4.4 Movable door 2 linkage down guider installation

Fix the plate for down guider with self-tapping screw on the bottom as the below picture shows.
If the door open from right side, the linkage down guider should be installed on the right side.
If the door open from left side, the linkage down guider should be installed on the left side.

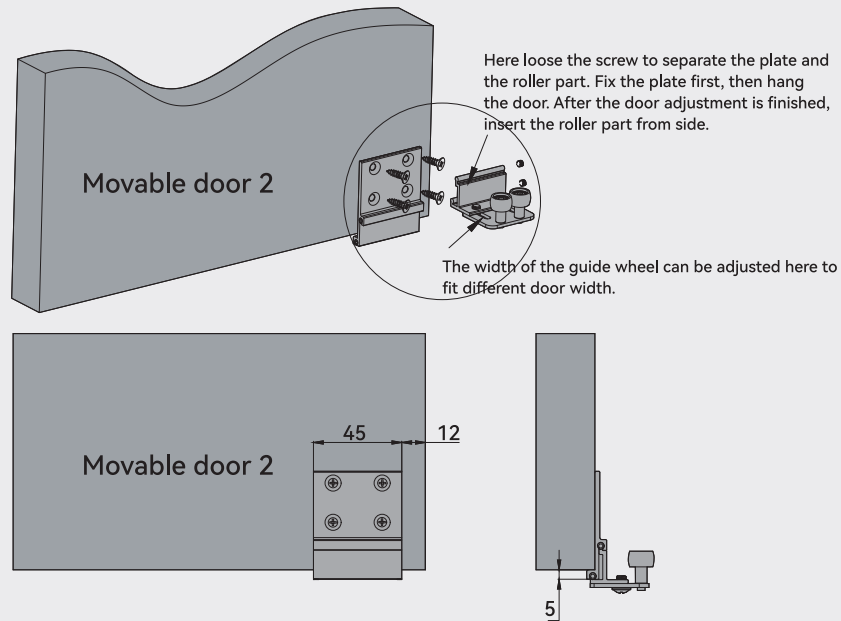


5. Door installation


5.1 Follow the below instruction to install the movable door 2

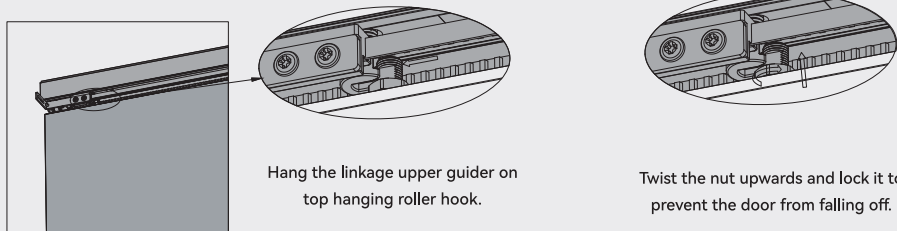

5.2 Install the movable door 1

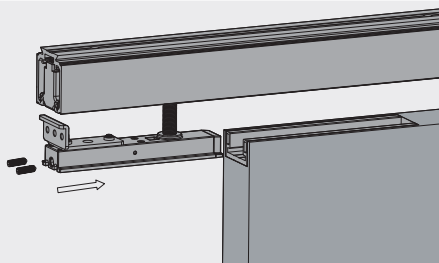


6. Fix the supporting plate

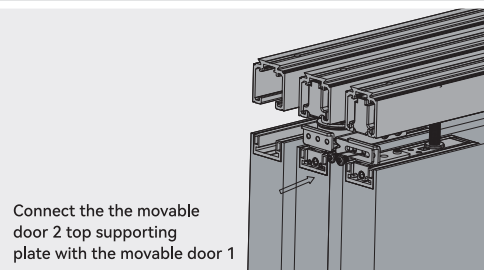

7. Fix the top hanging plate


Keep all the movable doors open , then fix the top belt hanging plate on the long transmission roller.

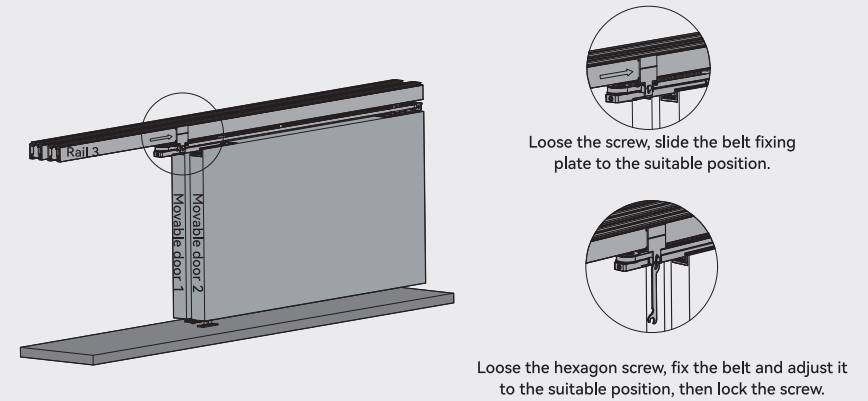

8. Install linkage down guider


8.1 Pull the door slightly out, then put the down guiding roller into the bottom rail of the door.

8.2 Insert the down guiding roller plate from the side and lock the screw.

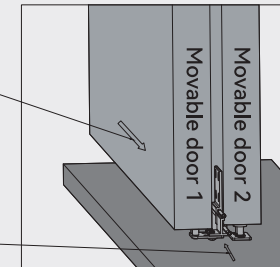

9. Adjust the height of the door

Open and close the door to confirm the position of the damper stopper. Make sure both opening and closing door have the soft closing function, then fix the damper stopper. Installation finished.




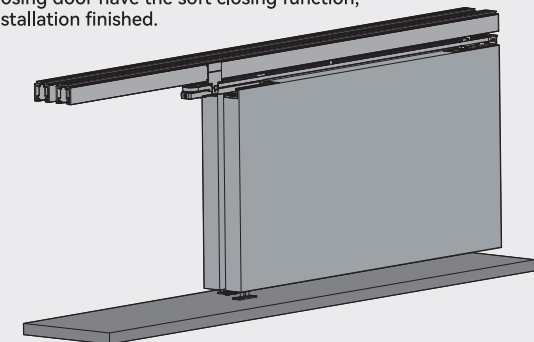




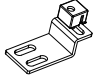






 
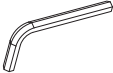




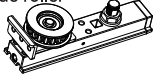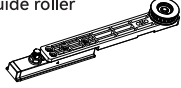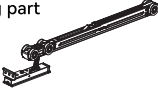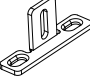

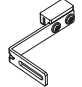T010A Synthetic linkage wooden door

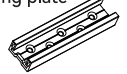Wooden door 3+0




Accessory List:

Accessory	Quantity	Accessory	Quantity
Linkage short guide roller 	2	Linkage long guide roller 	2
Damper with hanging part 	2	Top hanging plate 	1
linkage down guider 	2	Transmission belt 3 meter 	2
Belt supporting plate 	2	Top hanging plate (with M4*6 Outer hexagon screw) 	1
Belt fixing part 	1	Top hanging roller 	4
Damper stopper component 	2	Wooden door hanging plate 	6
Door stopper 	4	Wooden door down guiding roller 	1
ST3.5*12 Screw 	10	M4*12 Inner hexagon screw 	18
4mm Allen key 	1	M4*6 Screw 	4
M5*12 Outer Hexagon Three Combination Screws 	2	ST4*30 Self-tapping wooden screw 	30
2mm Allen key 	1		


Fixed door fittings need to be ordered separately

1. Door Dimension


Installation instruction (3+1)

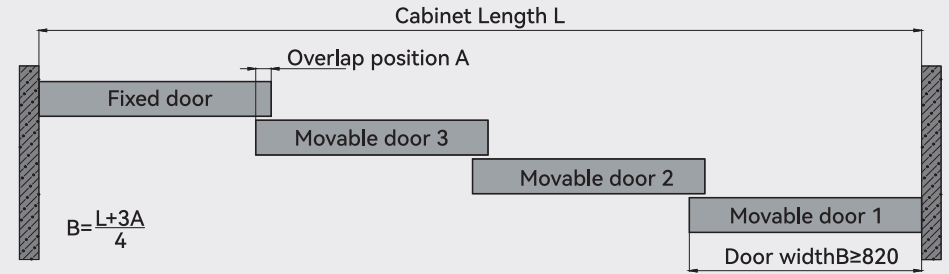

Single track diagram

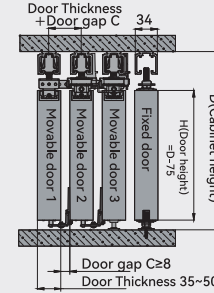


Hanging plate size and door slotting requirement

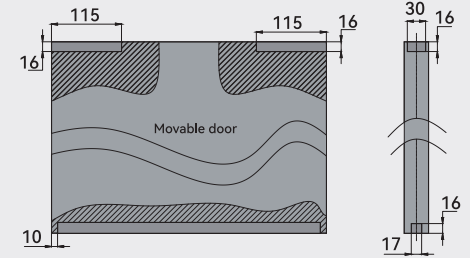

2. Rail accessory installation




3. Rail and down guider accessory installation

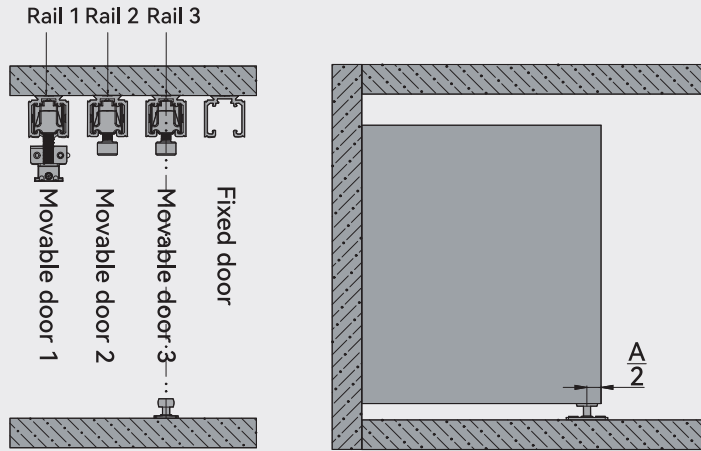


4. Door accessory installation




4.1 Movable doors hanging plate and down rail installation

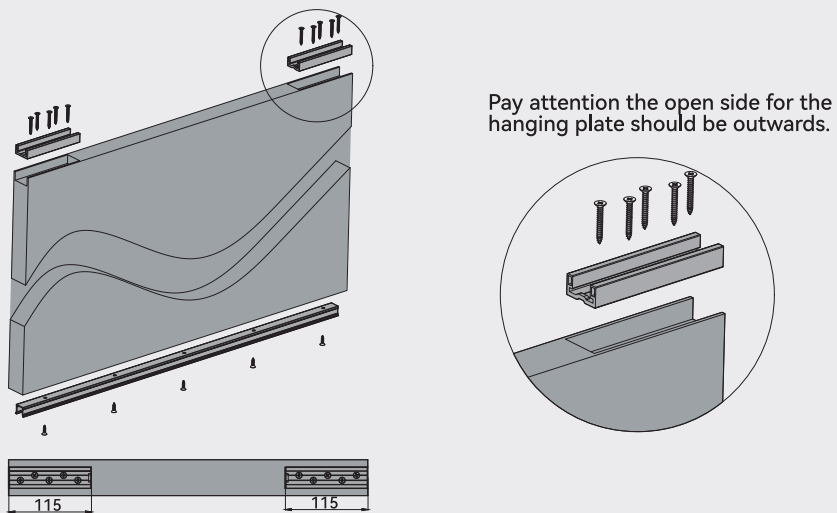


4.2 Movable door 2 and movable door 3 linkage accessory installation

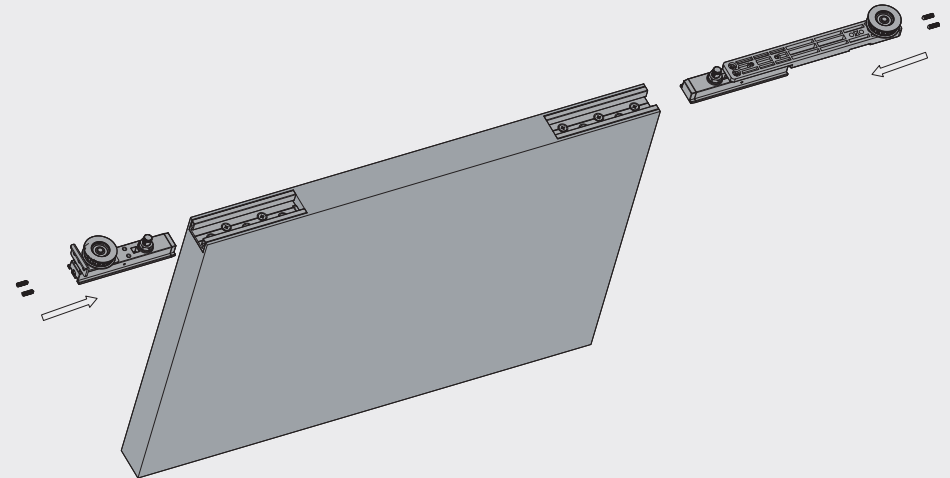

4.3 Install movable door 2 and movable door 3 belt supporting plate and adjust the belt until it is tight and not able to fall off

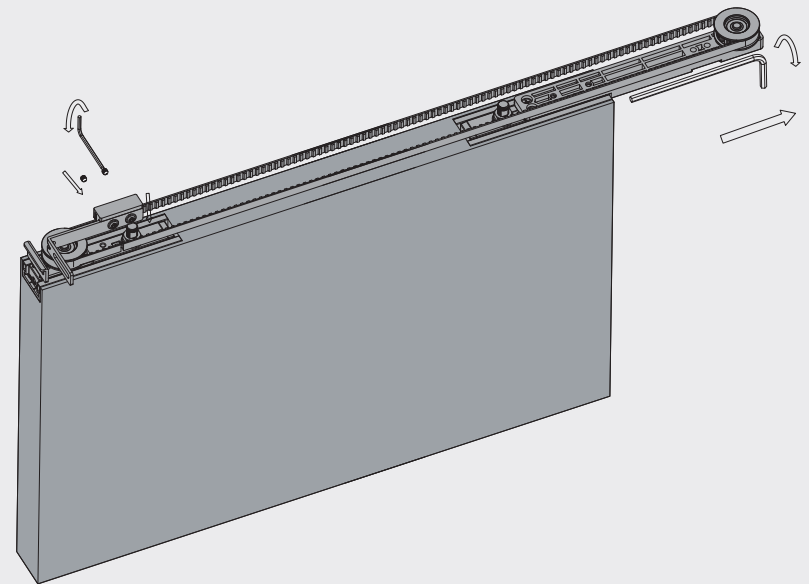


4.4 Movable door 2 belt fixing part installation

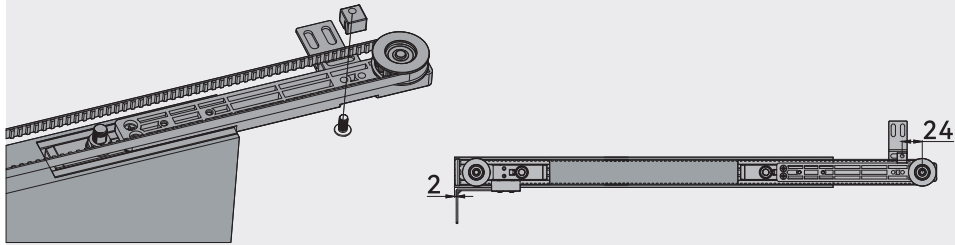

4.5 Movable door 2 and movable door 3 linkage down guider installation



Fix the plate for down guider with self-tapping screw on the bottom as the below picture shows. If the door open from right side, the linkage down guider should be installed on the right side. If the door open from left side, the linkage down guider should be installed on the left side.

Here loose the screw to separate the plate and the roller part. Fix the plate first, then hang the door. After the door adjustment is finished, insert the roller part from side.

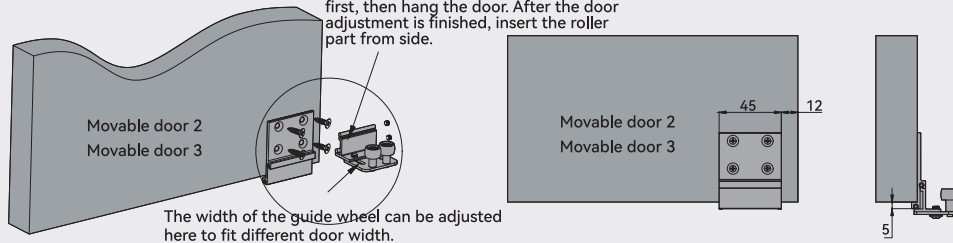


8. Fix the top hanging plate

Keep all the movable doors open, then fix the top belt hanging plate on the long transmission roller.

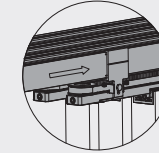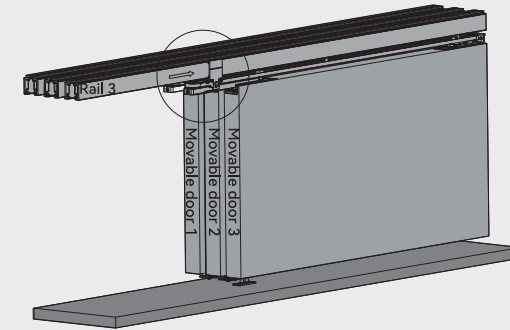


Loose the screw, slide the belt fixing plate to the suitable position.

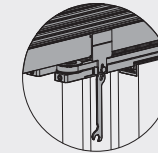


Loose the hexagon screw, fix the belt and adjust it to the suitable position, then lock the screw.

5. Door installation

5.1 Hang movable door 3 first, then hang movable door 2 in the same way

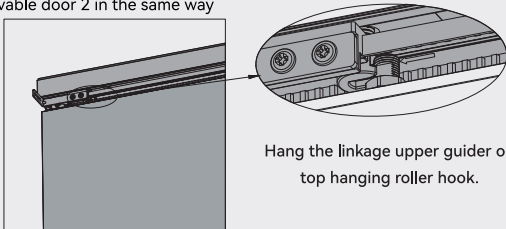


Hang the linkage upper guider on top hanging roller hook.

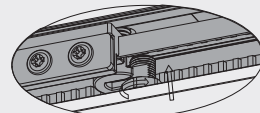


Twist the nut upwards and lock it to prevent the door from falling off.

5.2 Install the movable door 1

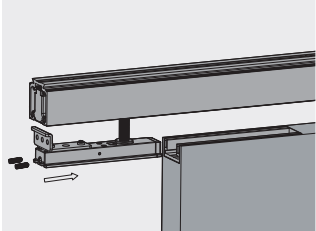


6. Fix the supporting plate

Connect the the movable door 3 top supporting plate with the movable door 2, Connect the the movable door 2 top supporting plate with the movable door 1

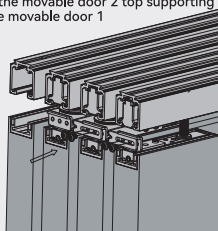

7. Fix the belt fixing part


7.2 Fix it after the doors are pushed to be in same level.

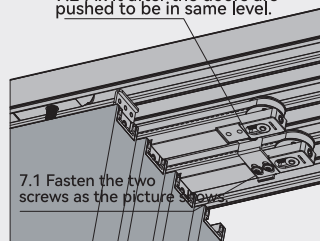

7.1 Fasten the two screws as the picture shows

9. Install linkage down guider

9.1 Pull the door slightly out, then put the down guiding roller into the bottom rail of the door.

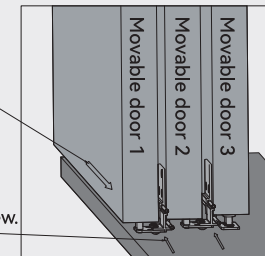

9.2 Insert the down guiding roller plate from the side and lock the screw.

10. Adjust the height of the door

Open and close the door to confirm the position of the damper stopper.

Make sure both opening and closing door have the soft closing function, then fix the damper stopper. Installation finished.

